


# Fitting Anti-Rotating Brackets

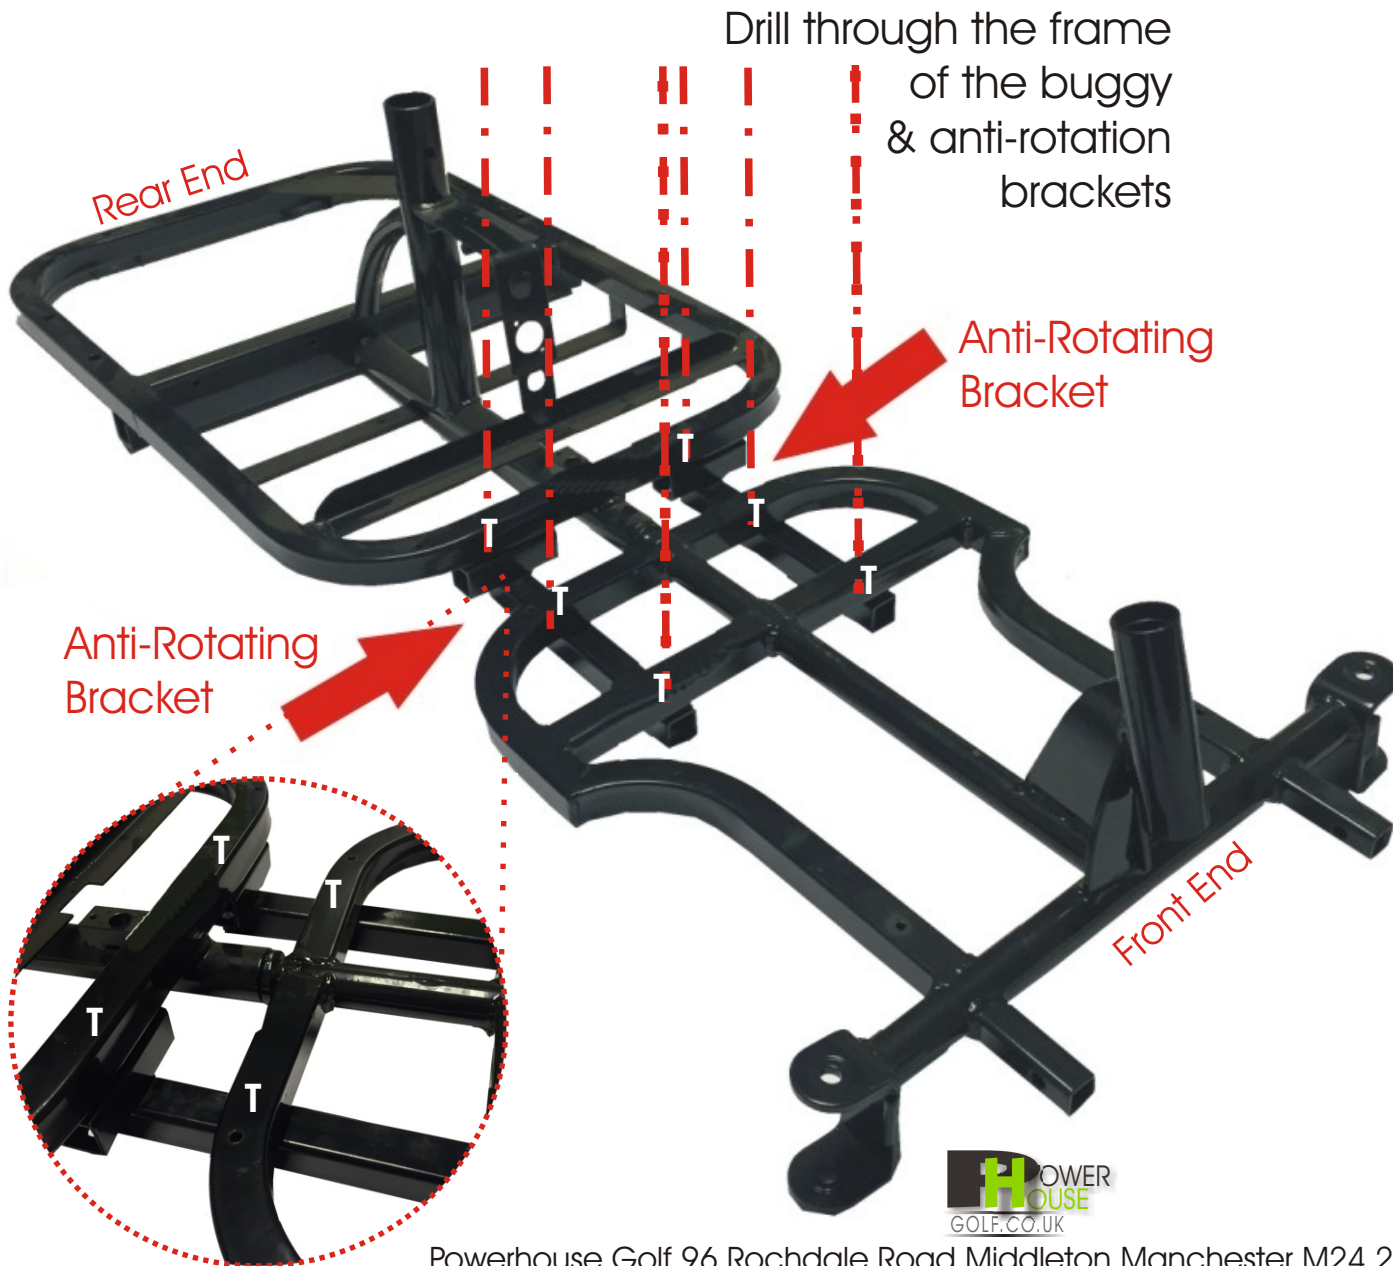

1. Line up the brackets under the buggy frame & make a mark

2. Drill through the frame & bracket (there should be 3 drill holes per bracket)

3. Bolt the brackets & frame together.

Bolt size - 75mm

Note\* When fitted, the buggy can no longer be separated without unbolting the units